

KOALA KARE PRODUCTS

Installation and Operation Instructions

KB102 Child Protection Seat (CPS)
Silla de protectora para niños
Siège de sécurité pour enfant (SSE)
Kinder-Sicherheitssitz (KS)



You are responsible for the safe operation of this unit.

IMPORTANT. RETAIN FOR FUTURE REFERENCE. READ CAREFULLY.
IMPORTANTE. GUÁRDELO PARA FUTURAS CONSULTAS. LEER ATENTAMENTE.
IMPORTANT. À CONSERVER POUR INFORMATION. À LIRE ATTENTIVEMENT.
WICHTIG. ZUR SPÄTEREN BEZUGNAHME AUFBEWAHREN. BITTE SORGFÄLTIG
DURCHLESEN.



OPERATING INSTRUCTIONS

Please Note:

To assure proper installation, it is suggested that a qualified person or carpenter install the Koala Child Protection Seat.

Koala Kare Products is not responsible if the seat is installed improperly.

You are responsible for the safe operation of this unit.

Not intended to hold more than 50 lbs.








Inspection Criteria:

A properly maintained unit:



- Opens and closes smoothly
- Has two end caps located on lower sides of unit.
- Has fastening nut located at end of rod.
- Has both ends of a functioning, non-frayed strap, buckle clicks when closed and strap is attached at both ends of the unit.

Using Restraint System

When a child is in the seat, the strap runs from the seat bottom, between child's legs, up to the waist where it fastens to the shoulder straps. Shoulder straps extend snugly over the shoulders and between the legs fastening at the waist. When the seat is open and child is in place, straps should hold child securely.

TOOLS NEEDED	#5 Allen Wrench 	Measuring Tape 	3/8" Drill Bit 
Gloves 	Phillips Head Screwdriver 	Level 	Pencil 

HARDWARE PROVIDED

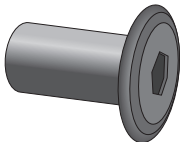Four 1/4" Bolts and Washers 	Four Threaded Barrel Bolts 
--	---

Distributed by
www.PandaProducts.com
 Phone: (800) 608-6568
 Fax: (409) 840-5545
info@pandaproducts.com

INSTALLATION INSTRUCTIONS

KB102 Child Protection Seat (CPS) Model Number KB102

Step 1.

The Child Protection Seat (CPS) is designed to be mounted on a bathroom or fitting room partition. The unit can also be mounted on a side wall (hardware not included). Establish proper CPS placement, taking door swing and clearance into consideration.

Step 2.

Place the bottom of the unit 2" (51 mm) above the bottom of the partition or 14" (356 mm) above the floor, whichever is higher. Use the CPS as a template for locating and marking the mounting holes.

Step 3.


After establishing the proper placement of the four mounting holes, drill through the partition using a 3/8" (10 mm) drill bit.

Step 4.


Insert the four threaded barrel bolts (supplied) from the outside of the partition. Mount the unit using the four 1/4" (6 mm) bolts and washers.

Step 5.

Position Koala sign (supplied) on the outside of the restroom door.

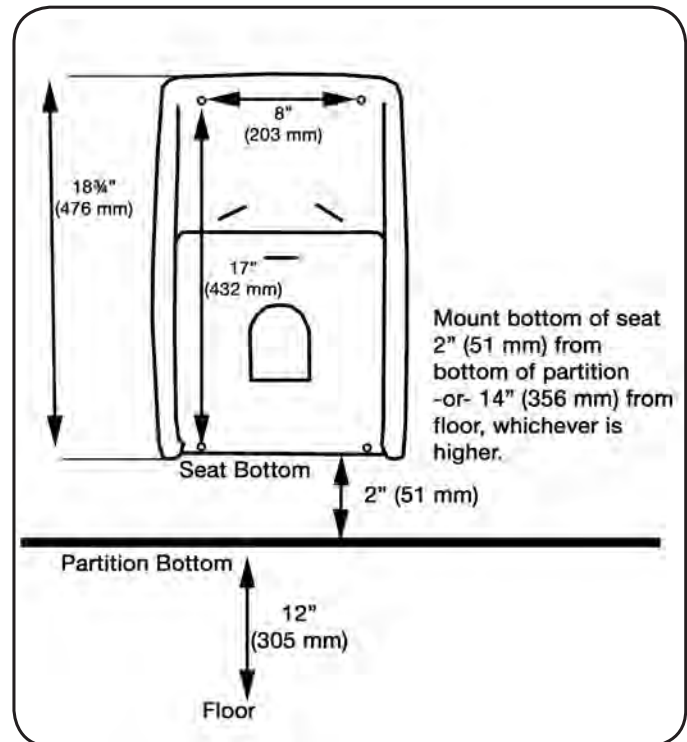

Insert Barrel Bolts from outside of partition wall. Use supplied hardware shown.

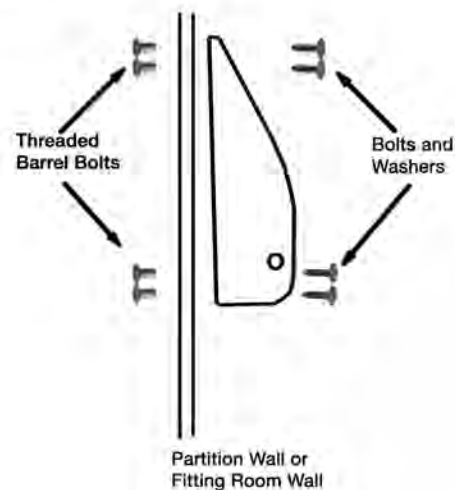

Unit Dimensions:
Height: 18 3/4" (476 mm)
Width: 12 1/4" (311 mm)
Depth: 5 5/8" (143 mm) closed
Depth: 12 1/4" (311 mm) open